

GUILLOTINE INC.

Flow Restrictor
P.O. Box 1224
Twain Harte, CA 95383
800-824-1394/Fax 209-586-6471

April 1997

3" INSTALLATION INSTRUCTION

1. Carefully inspect the Guillotine fill limiter to check for any damage during shipment.
2. Hold the unit in an upright position (that is, with the 6" fill adapter on top). Grasp the float and slide it up and down a few times to make sure the slide mechanism works freely.
3. Attach the 6" drop tube using the flathead screws provided.
4. Carefully insert the Guillotine fill limiter into the 6" fill nipple in you tank, being careful not to damage the float mechanism
5. Securely tighten the 6" adapter to the 6" fill nipple with a pipe wrench.
6. Affix the Guillotine warning decal to the fuel storage tank at the fill nipple.
7. The Guillotine fill limiter is now ready for operation.
8. **WARNING:** For safe operation, the Guillotine valve must be connected with camlock type fittings or may be fitted with dry disconnects.

OPERATION INSTRUCTION

1. Connect the delivery nozzle to the fill limiter; confirm all connections are tight.
2. Begin filling the tank: as the Guillotine fill limiter closes, there will be excessive back pressure in the delivery system and the delivery rate will be reduced significantly (to about two gallons per minute) which you will be able to see on the fuel meter on the delivery truck, indicating the tank is reaching maximum capacity.
3. Shut off delivery system; when the pump is shut down there will be fuel between the nozzle and the fuel Guillotine fill limiter, allow 60 seconds for each 12 inches of nozzle spout for the fuel to drain into the tank or you may use dry disconnects to eliminate the waiting period and insure no fuel spill
4. Disconnect delivery system; attach cap to fill port.